



Fujifilm FinePix S4200 Battery Replacement

The following guide will demonstrate how to replace drained batteries from your powerless camera.

Written By: Jackie Acevedo



INTRODUCTION

If your camera will not start, replacing the batteries might be a good solution.

Step 1 — Battery




- ① **i** Assure that your camera is off.
- Begin with the camera upside down so that the battery compartment is showing.

Step 2



- Slide the latch down towards the lens.
- Push the battery cover out to the right, toward the HDMI and USB ports.

Step 3

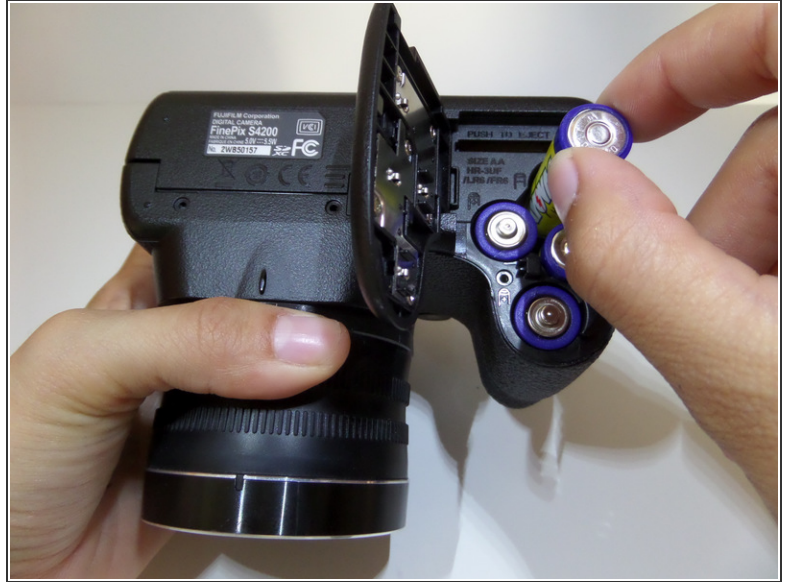

- Lift the battery cover up so that you can view all four batteries.
- Remove the batteries from the compartment.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 11:56:15 PM.